



AireShare™ Transfer Fans

**Make Hot or Cold Rooms More Comfortable
Extend Comfort from Ductless Heating and Cooling**

Room to Room

Pull cool air from floor level or warm air from ceiling level and distribute high or low



Level to Level

Pull warm or cool air from one level and distribute up or down



The Perfect Solution for:

- Split System, PTAC & Window A/C
- Space Heaters, Stoves & Fireplaces



Share Air Where Needed

The Perfect Solution for:

- Hard to Heat or Cool Levels
- Stoves, Fireplaces & Cool Lower Levels

