




TJERNLUND PRODUCTS, INC.

1601 Ninth Street • White Bear Lake, MN 55110-6794
PHONE (800) 255-4208 • (651) 426-2993 • FAX (651) 426-9547
Visit our web site • www.tjernlund.com

IMPORTANT: FOLLOW THE INSTRUCTIONS BELOW IF WIRING TRANSDUCER WITH **CPC-3**

WARNING: Wires from the R, B and G positions of the transducer must go to their corresponding R, B and G positions on the CPC-3 Controller, at either the Inducer or Combustion Air terminal block.
INCORRECT WIRE ROUTING WILL DESTROY THE TRANSDUCER AND MAY DAMAGE THE CONTROLLER.

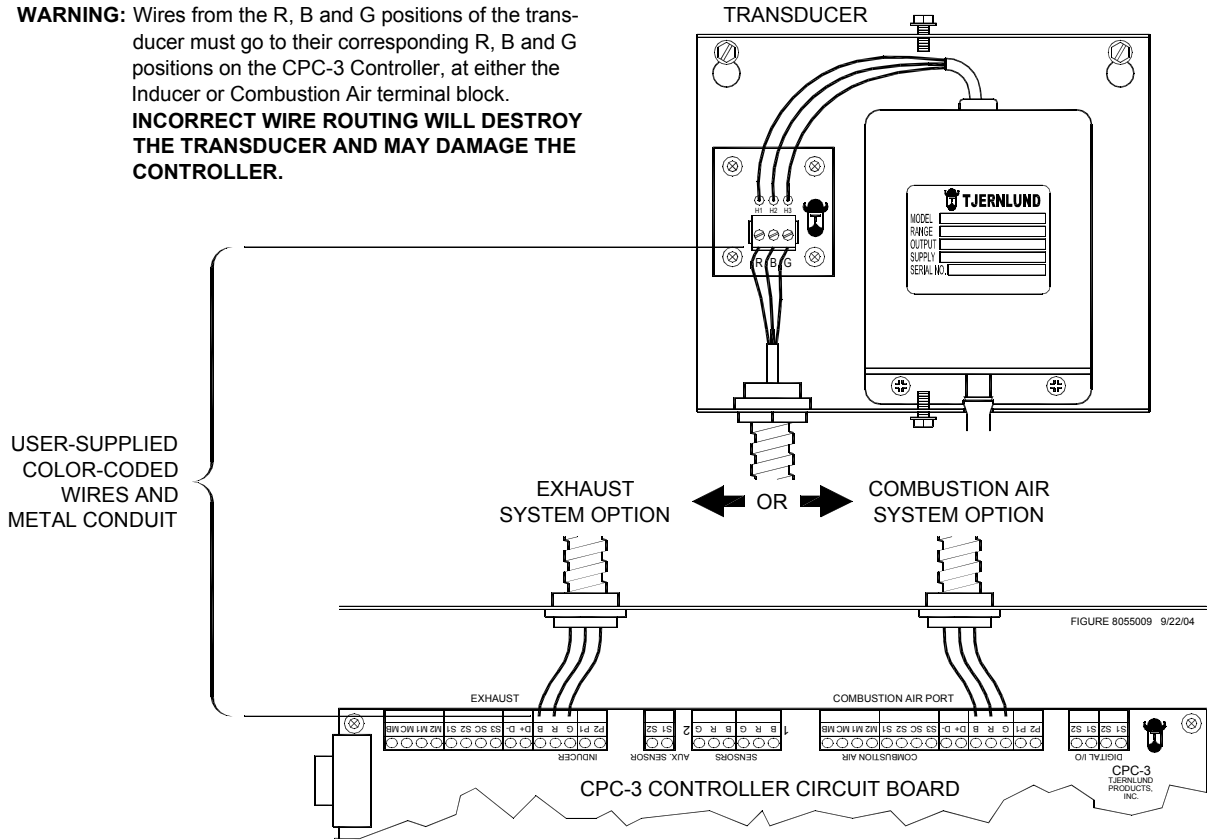

IMPORTANT: FOLLOW THE INSTRUCTIONS BELOW IF WIRING TRANSDUCER WITH **CPC-2**

WARNING: The current TD-series transducer has terminals labeled only with letters. Wire from the terminal letters on the transducer to the terminal numbers on the CPC-2 circuit board as follows:
G to 3, B to 2, R to 1
INCORRECT WIRE ROUTING WILL DESTROY THE TRANSDUCER AND MAY DAMAGE THE CONTROLLER.

